



9.2 – C60 – CONTROL PANEL

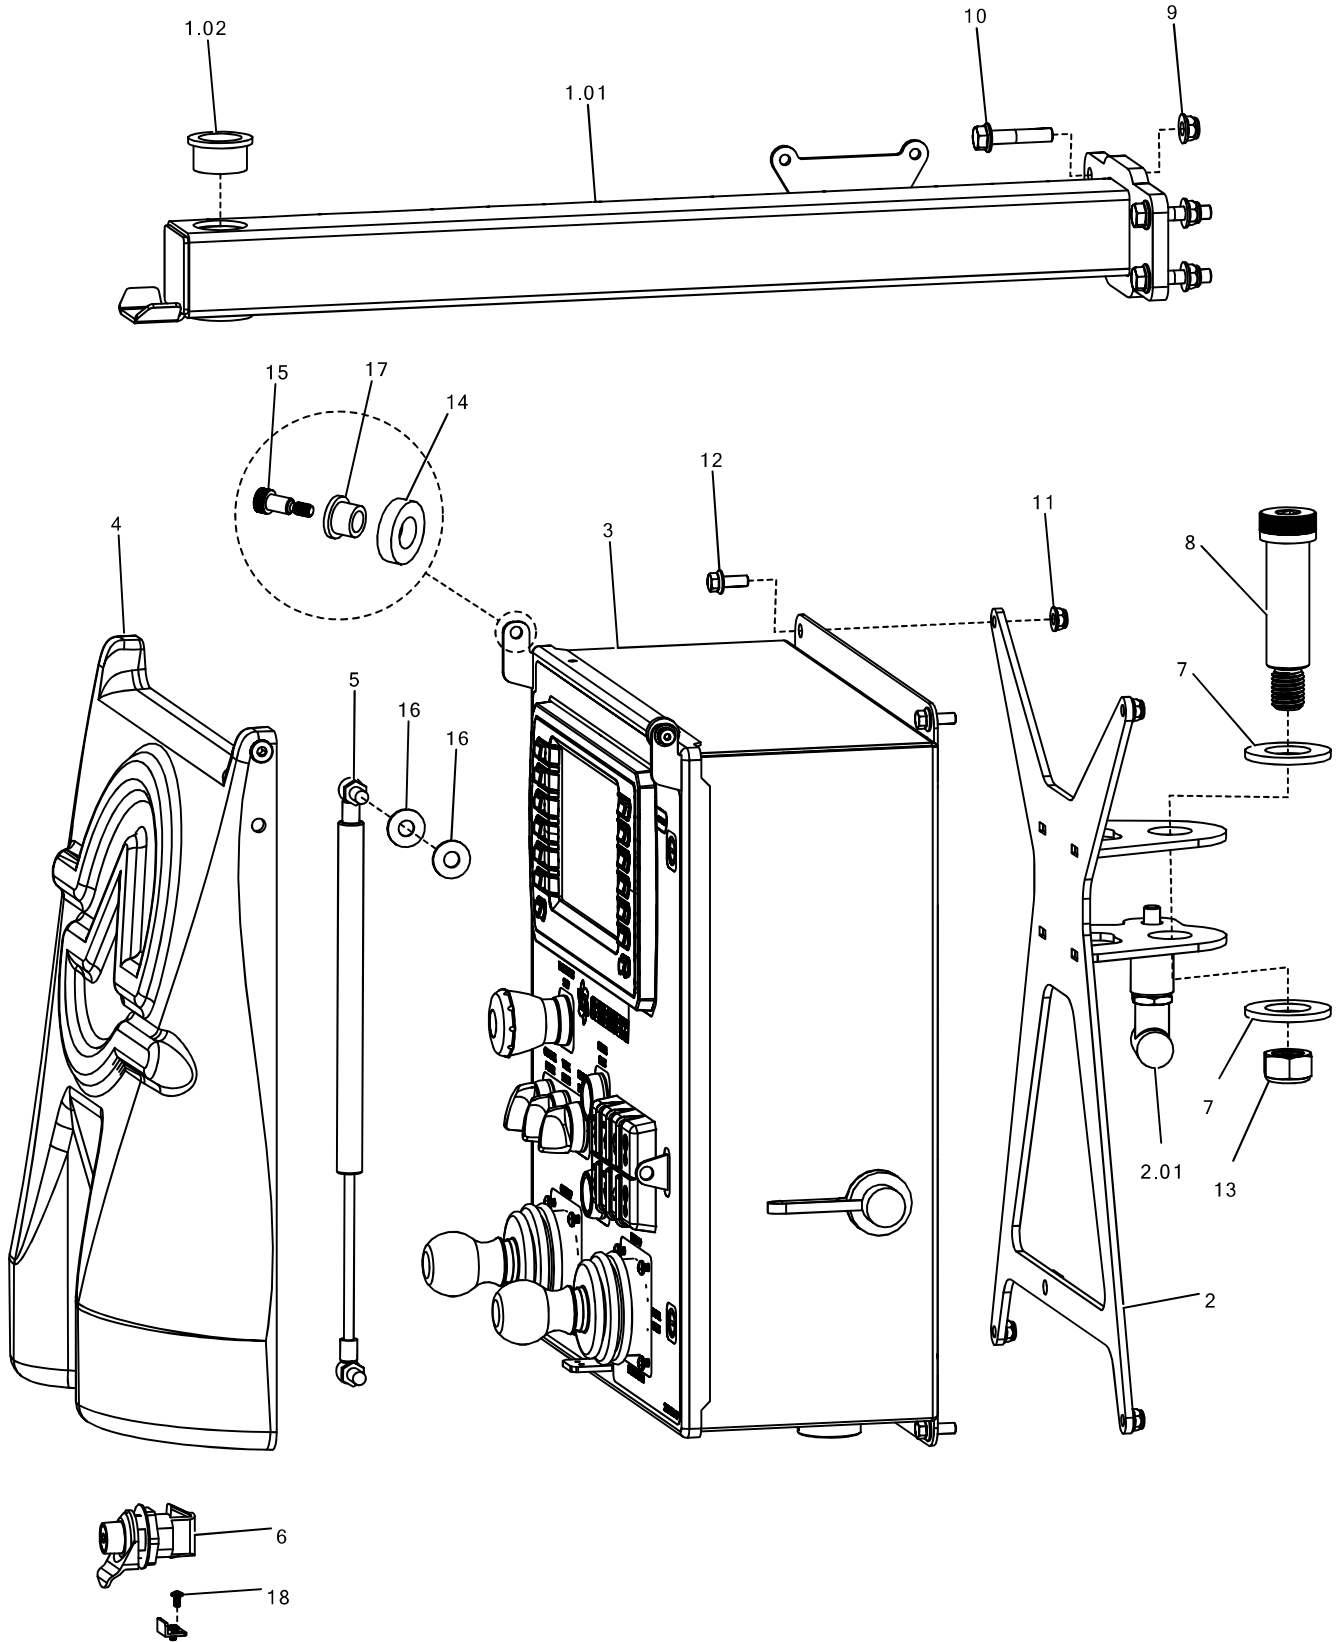


9.2 – C60 – CONTROL PANEL

Item	Description	Part Number	Quantity	
			C60	C60E
1	MOUNT ASSY	2542-404-01	1	1
1.01	MOUNT	2542-206-02	1	1
1.02	BUSHING	5154-416-012	2	2
2	MOUNT	2542-275-02	1	1
2.01	LOCK PIN	5377-701-000	1	1
3	CONTROL PANEL	2552-234-10	1	1
4	COVER	2542-161-00	1	1
5	GAS SPRING	5379-801-000	1	1
6	LATCH	5370-637-000	1	1
7	WASHER	5310-800-002	2	2
8	SHOULDER BOLT	5365-711-003	1	1
9	FLANGE LOCK NUT	5307-118-000	4	4
10	FLANGE BOLT	5309-112-000	4	4
11	FLANGE LOCK NUT	5307-020-000	4	4
12	FLANGE BOLT	5309-005-000	4	4
13	LOCK NUT	5302-711-001	1	1
14	GASKET	2542-089-09	2	2
15	SHOULDER BOLT	5365-713-003	2	2
16	WASHER	5310-100	2	2
17	BUSHING	5180-958-000	2	2
18	SCREW	5335-102-000	2	2

9.2.1 – C60 – CONTROL PANEL ASSEMBLY

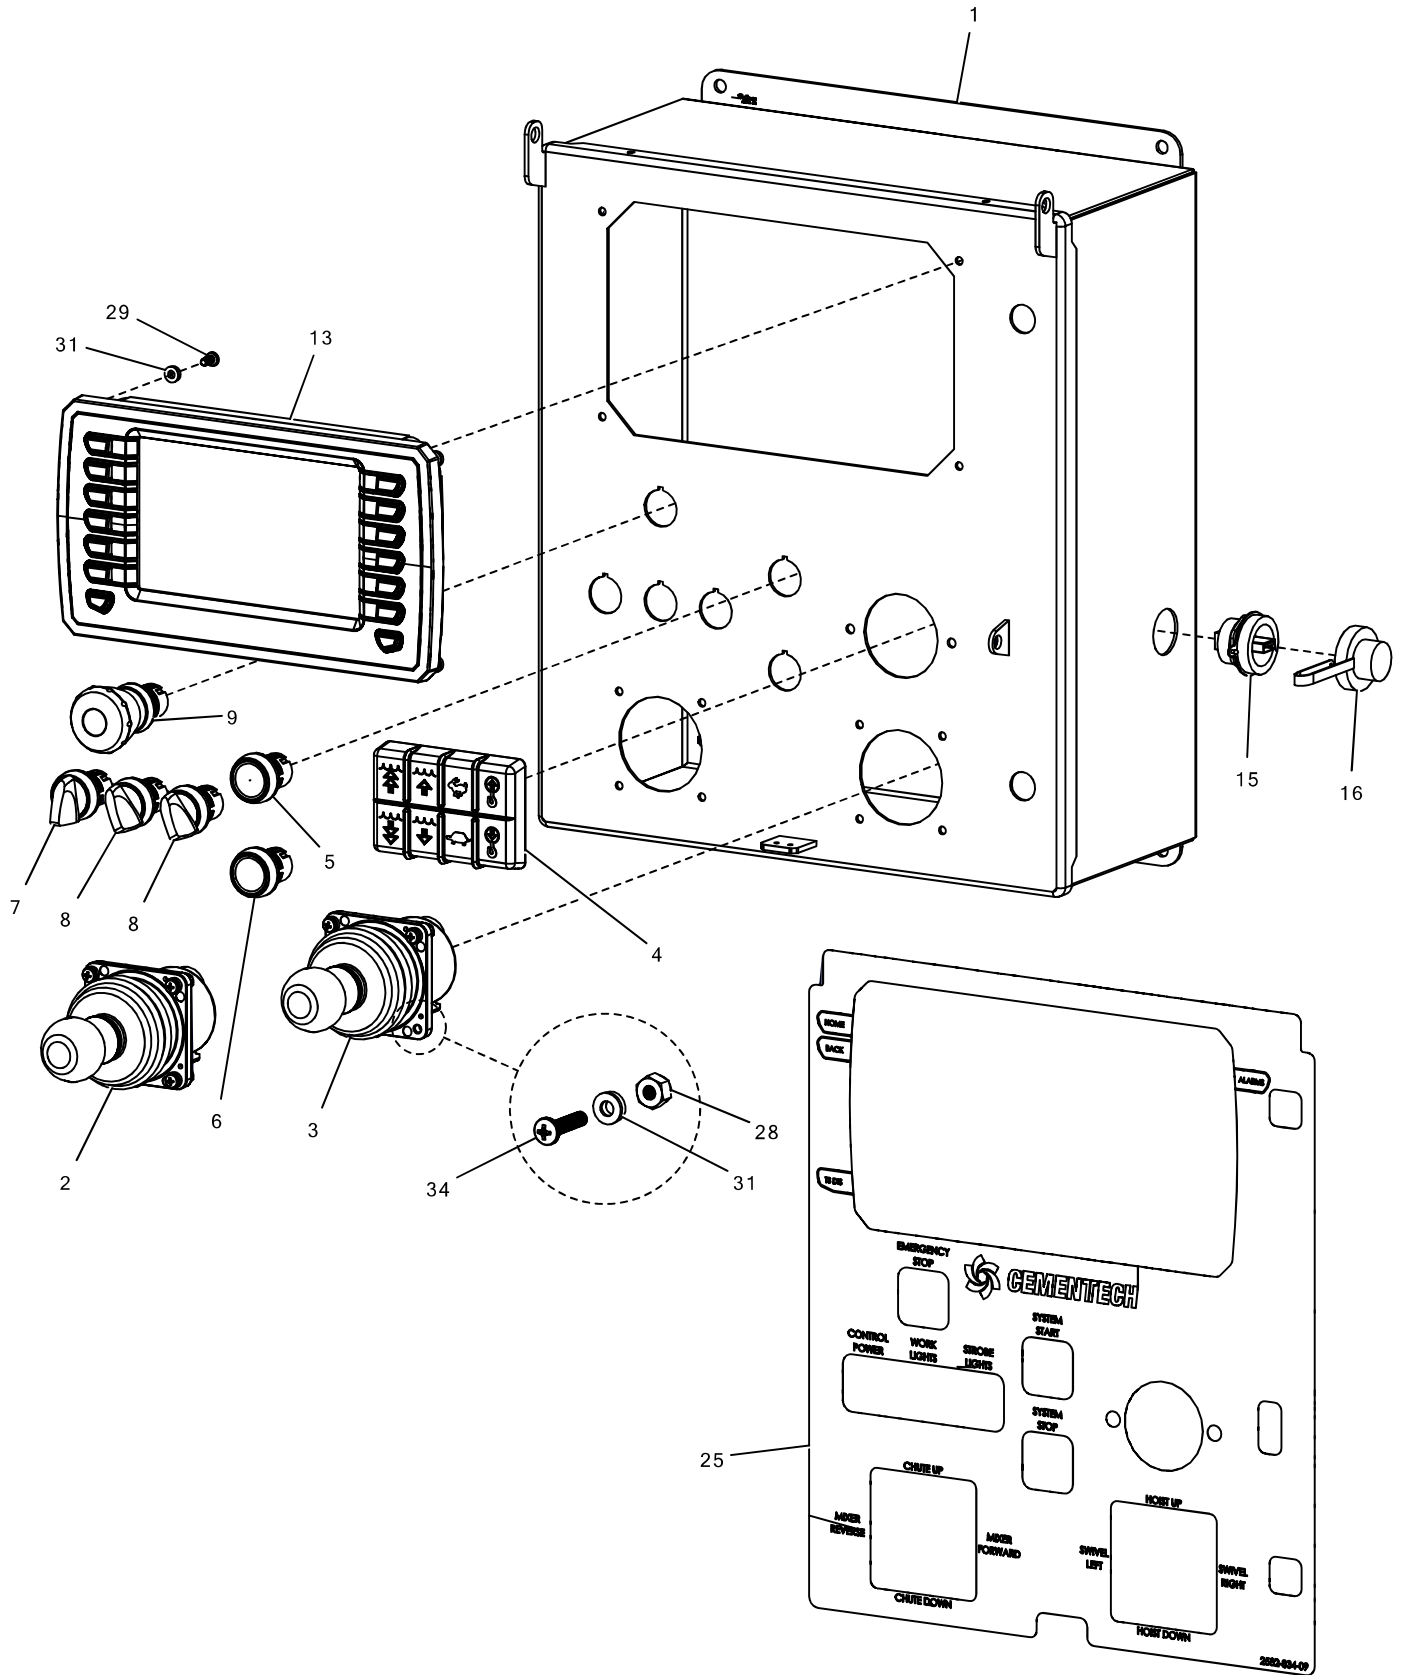

9.2.1 – C60 – CONTROL PANEL ASSEMBLY

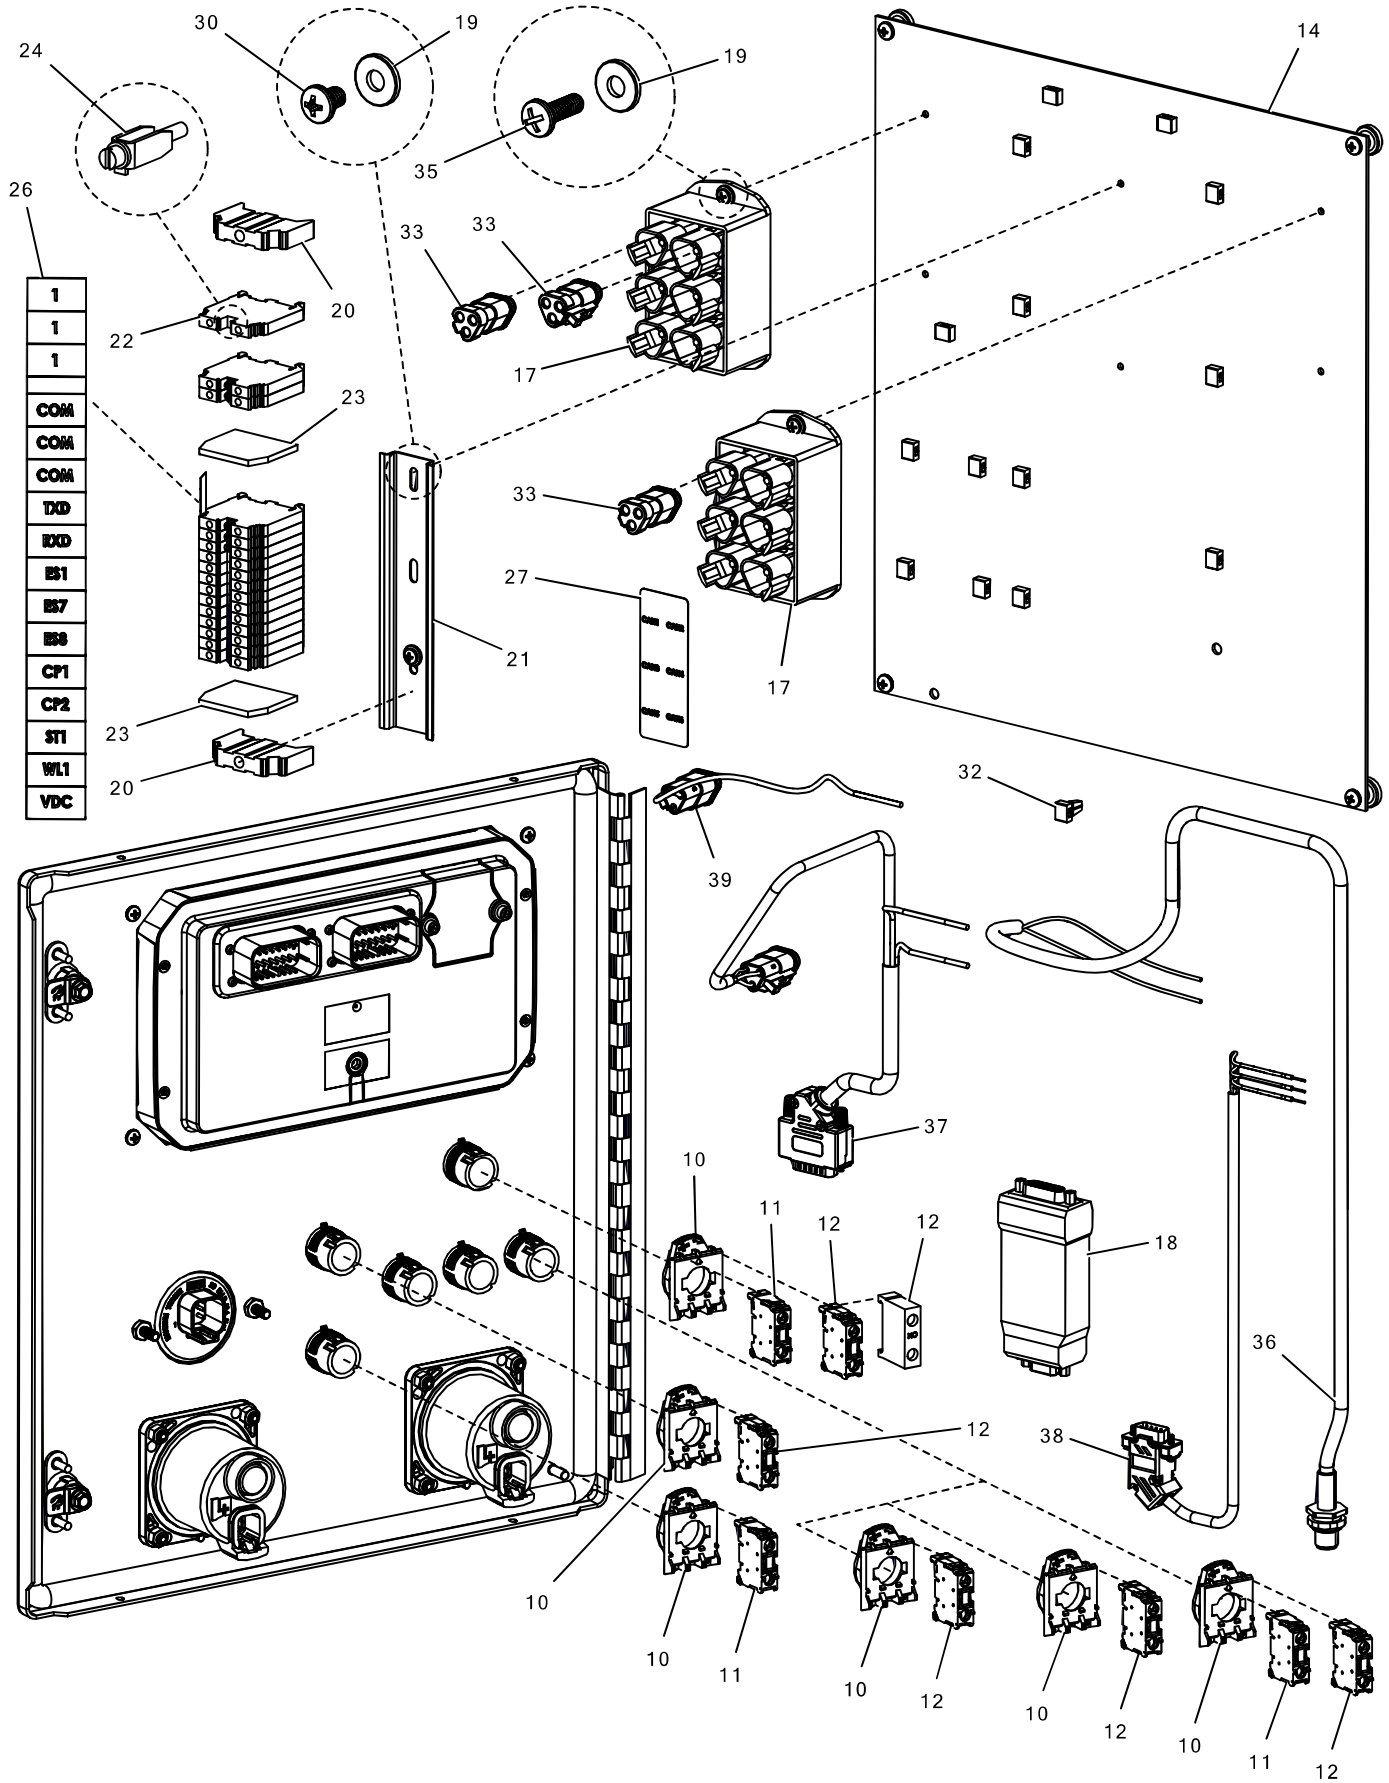

9.2.1 – C60 – CONTROL PANEL ASSEMBLY

Item	Description	Part Number	Quantity	
			C60	C60E
1	ENCLOSURE	2552-234-09	1	1
2	JOYSTICK, MIXER	5549-022-100	1	1
3	JOYSTICK, HOIST	5549-022-101	1	1
4	BUTTON PAD	5549-022-010	1	1
5	SWITCH, SYSTEM START	5522-757-001	1	1
6	SWITCH, SYSTEM STOP	5522-757-003	1	1
7	SWITCH, POWER	5522-755-002	1	1
8	SWITCH, LIGHTS	5522-755-001	2	2
9	SWITCH, E-STOP	5522-758-102	1	1
10	SWITCH BACK	5522-750-000	6	6
11	SWITCH CONTACT, NC	5522-753-001	3	3
12	SWITCH CONTACT, NO	5522-753-100	6	6
13	DISPLAY	2552-734-00	1	1
14	BACK PANEL	2552-234-07	1	1
15	USB PORT	5548-843-400	1	1
16	USB COVER	5548-843-502	1	1
17	CAN SPLITTER	5549-048-100	2	2
18	PRINTER CONVERTER	5549-048-111	1	1
19	WASHER	5336-144	6	6
20	END ANCHOR	5538-009.10	2	2
21	DIN RAIL	5538-002.02	0.5'	0.5'
22	TERMINAL	5538-042	16	16
23	TERMINAL COVER	5538-042.2	2	2
24	TERMINAL JUMPER, 10 PACK	5538-010.4	1	1
25	LABEL, DOOR	2552-834-09	1	1
26	LABEL, TERMINALS	2552-834-10	2	2
27	LABEL, CANS	2552-834-11	1	1
28	LOCK NUT	5337-101-003	8	8
29	SCREW	5335-203-001	4	4
30	SCREW	5335-202	2	2
31	SEALING WASHER	5336-144-001	12	12
32	WIRE TIE CLIP	5532-203-001	15	15
33	DEUTSCH CONNECTOR	5530-765-002	3	3
34	SCREW	5335-206-001	8	8
35	SCREW	5335-204	4	4
36	WIRELOOM, BLUETOOTH	2552-534-10	1	1
37	WIRELOOM, CAN TO PRINTER CONVERTER	2552-534-17	1	1
38	WIRELOOM, PRINTER	2552-534-19	1	1
39	WIRELOOM, PRINTER GROUND	2552-534-16	1	1
40	WIRELOOM, DOOR WIRING	2552-534-12	1	1
41	WIRELOOM, USB	2552-534-06	1	1
42	WIRELOOM, ENTRANCE	2552-534-08	1	1
43	WIRE TIE	5532-104	20	20